
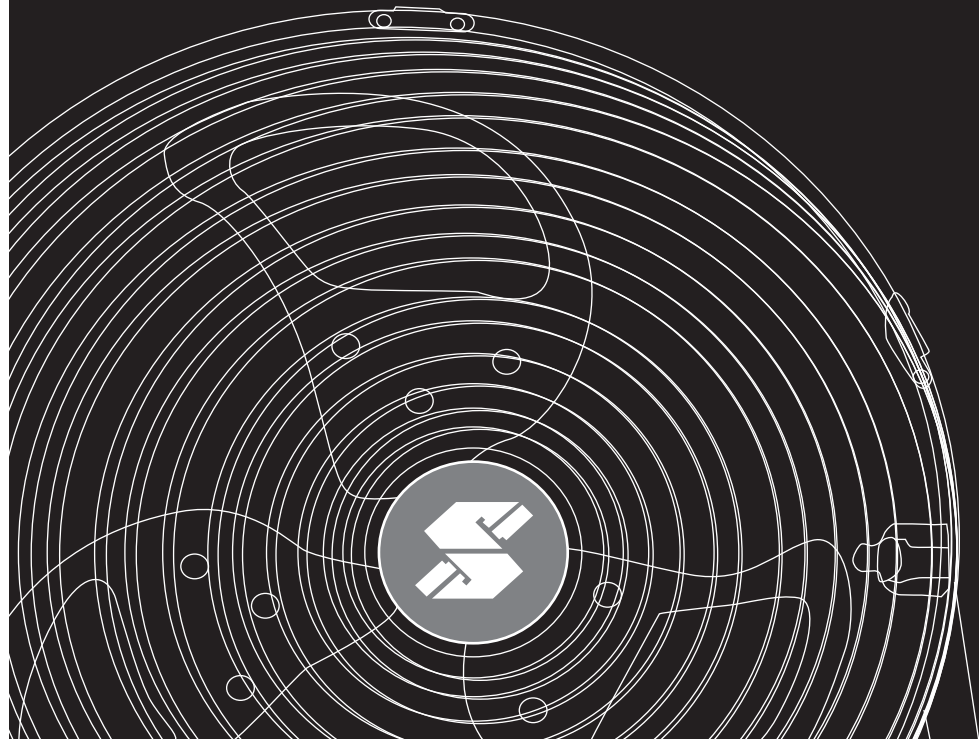



<div><p>Please read and understand this manual thoroughly before using this product and retain it for future reference.</p></div>	<div>Important Notes</div> <div><div><div>1. Use this air circulator only as described in this manual. Not doing so may cause fire, electric shock or injury to persons.</div><div>2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.</div><div>3. To protect against electric shock: do not place product on windowsills, immerse unit, plug or cord in water or spray with liquids.</div><div>4. To reduce the risk of shock, this plug is intended to fit the outlet. If it does not fit, contact a qualified electrician. DO NOT attempt to overcome this safety feature.</div><div>5. Close supervision is necessary when any appliance is used by or near children.</div><div>6. Turn the air circulator OFF and unplug the air circulator from the outlet when not in use, when moving the air circulator from one location to another and before cleaning.</div><div>7. To disconnect the air circulator, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.</div><div>8. Do not operate the air circulator in the presence of explosive and/or flammable fumes.</div><div>9. Do not place the air circulator or any parts near an open flame, cooking or other heating appliance.</div><div>10. Do not operate air circulator with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.</div><div>11. Avoid contact with moving air circulator parts.</div><div>12. The use of attachments not recommended by the manufacturer may be hazardous.</div><div>13. Place the air circulator on a dry level surface.</div><div>14. Do not hang or mount air circulator on a wall or ceiling.</div><div>15. Do not operate if the air circulator housing is damaged.</div><div>16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.</div><div>17. Only use on 220-240VAC, 50/60Hz power supply.</div><div>18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.</div><div>19. Cleaning and user maintenance shall not be made by children without supervision.</div><div>20. The air circulator unit comes with one(1) year warranty. Terms and conditions apply. Damages caused by wrong treatment or operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this warranty.</div></div><div>Pg.1</div></div>	<div><div><div>20. The air circulator unit comes with one(1) year warranty. Terms and conditions apply. Damages caused by wrong treatment or operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this warranty.</div><div>21. Please register the warranty once you purchased this air circulator unit.</div><div>22. When the product is still under warranty and you need to send it to our service care centre for repair, please bring along your product's purchase receipt/invoice and warranty card for verification purpose.</div><div>23. Never attempt to disassemble/repair/modify the product and move any inside components or parts, else it will void your warranty. In event of product damage / breakage, stop use immediately and replace / repair.</div></div><div>Warning</div><div>Parts Description</div><div><div><div>1) Screw Of Guard</div><div>2) Front Guard</div><div>3) Fan Blade</div><div>4) Fan Blade Locking Screw</div><div>5) Motor</div><div>6) Rear Grille Locking Screws</div><div>7) Rear Guard</div><div>8) Switch Control</div><div>9) Power Cord</div><div>10) Nut</div><div>11) Cushion</div><div>12) Bolt</div><div>13) Base</div><div>14) Non-Slip Feet</div></div><div>Pg.2</div></div></div>	<div>Technical Parameter</div> <div><div>Model: BFF-12</div><div>Working Voltage: AC 220-240V, 50/60Hz</div><div>Power: 55W</div><div>Front Guard: 360mm</div><div>Blade Diameter: 290mm</div><div>Wind Speed: 5.7±0.3 m/s</div><div>Wind Distance: 6M max.</div><div>Noise dB(A): 59±10dB(A) max.</div><div>Product Dimensions: 390 x 210 x 380mm</div><div>Product Weight: 3.5kg</div><div>Climate Class: T</div><div>Parts Warranty Period: 2 Years</div></div> <div>Operating Instructions</div> <div><div>Swing Control</div><div>Turn On / Off the oscillation function by pressing the oscillation switch button.</div><div>Speed Regulation</div><div>The number 0, 1, 2, 3 on the Speed Control Switch Indicators.</div><div>0 = Stop, 1 = Low Speed, 2 = Medium Speed, 3 = High Speed</div><div>Turn the speed control switch to your desired fan speed.</div></div> <div>Pg.3</div>	<div>Technical Assistance</div> <div><div>If further technical assistance is required, please contact our customer care service team through WhatsApp at 6296 3038.</div><div><div>SERVICE & SUPPORT HOTLINE</div><div>Hotline: 65-6296 3038</div><div>Whatsapp: 65-6296 3038</div><div>Email: info@heanlee.com.sg</div></div><div></div><div><div>SERVICE HOURS</div><div>9am - 4.30pm (Monday to Friday)</div><div>Closed on Weekend and Public Holiday</div></div><div><div>SERVICE LOCATION</div><div>No.1 Genting Link, #03-04, Perfect One, Singapore 349518</div></div><div>Disclaimer</div><div>Pg.4</div></div>	<div>Warranty Registration</div>
--	---	--	--	---	----------------------------------